

# Axle Removal Skid

Used when removing axles after completion of setting unit on site. Simply unbolt axle and lay in skid pan with hub behind bracket, move to opposite side and after removing bolts, slide axle out from under home. Turns a rough job into a safe one person operation.



## Part #59399



D1283 - Rev. 1/4/19