


Adjustable Outrigger/Diagonal Strut Installation Instructions

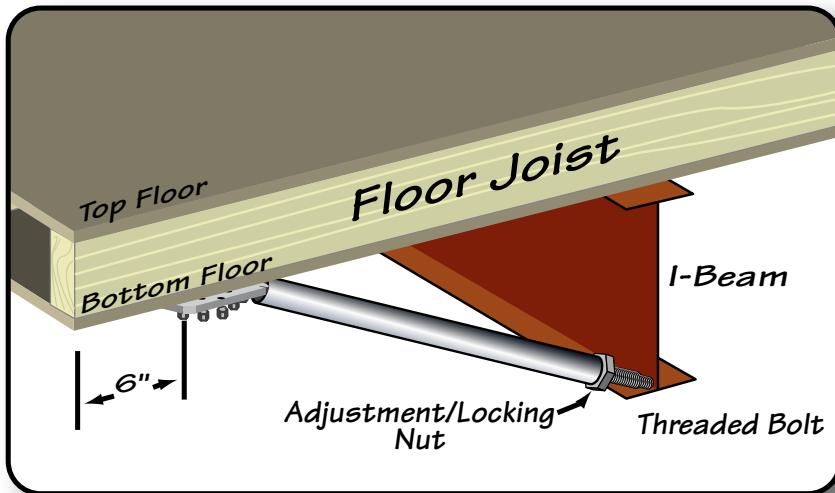


**18" Outrigger Kit
Part #59361**

**24" Outrigger Kit
Part #59363**

**36" Outrigger Kit
Part #59365**

(Outrigger Kits Sold in Pairs)

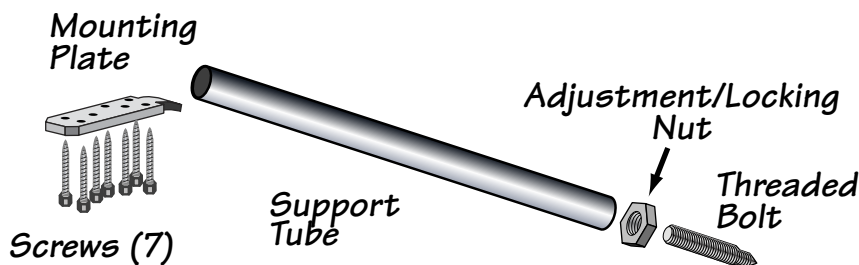

Adjustable Outrigger/Diagonal Strut Installation Instructions

1. Determine floor joist area needing support.
2. Set mounting plate on floor joist and secure with the #12 x 2" screws provided (7 screws provided but only 5 are required). Approx. 6" from outer rim joist.
3. Insert threaded adjuster bolt in support tube so it clears I-beam flange when mounting Plate is inserted and chisel end is placed against the frame. If support tube is too long, simply cut square to desired length.
4. Raise floor joist with jack to desired level before tightening the nut on the threaded bolt, snug fit to 1/4 turn past.
5. Replaces perimeter piers required for window and door support and alignment except as required by the home manufacturer for larger openings.
6. Built to Federal Manufactured Home & Safety Standards, for maximum openings up to 6' for 20 psf. roof load, 5' for a 30 psf. roof load or 4' for a 40 psf. roof load per set of adjustable outrigger. Based on 180" maximum floor width with 12" maximum eaves.
7. Outriggers can be used on openings up to 8' wide on roof loads up to 30 psf. when 2 outriggers are placed on each side of the opening. Place 1 outrigger on the first floor joist inside the opening and 1 outrigger on the first joist outside the opening. If the wall jamb falls directly over a joist, place 1 outrigger on that joist and the other one on the first floor joist inside the opening.
8. Installation of each outrigger should be in accordance with these instructions within 3' of a pier support or standard outrigger.

Do not use on homes while being transported.

Note: This component is not designed or intended to replace any foundation supports required by The home's manufacturer and is not a repair for damaged joists. These instructions address the capacity of the adjustable outrigger only.

Instructions #59361-1 (D270 - Rev. 1/4/19)