

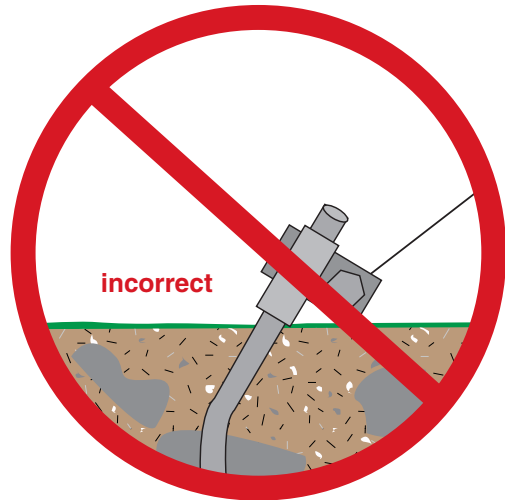
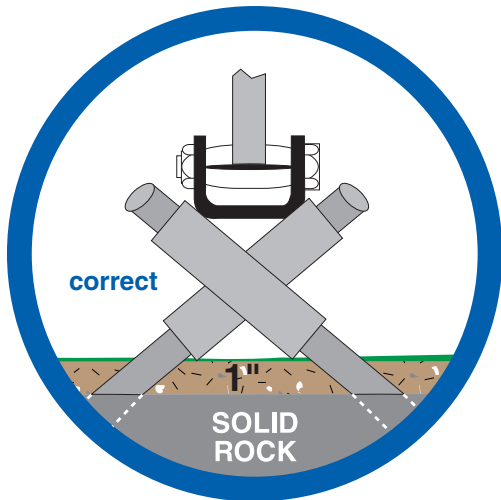




# General Anchoring Information:

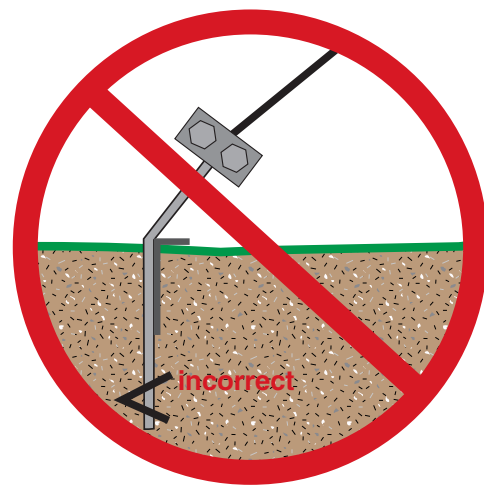

**WARNING:** Rock anchors can fail under high wind loads if they are not installed into solid rock. Rock surface must be within 1" of the rock anchor tension head in order to prevent failure. Rock anchor drive rods must be installed into predrilled holes not to exceed 3/4" diameter.

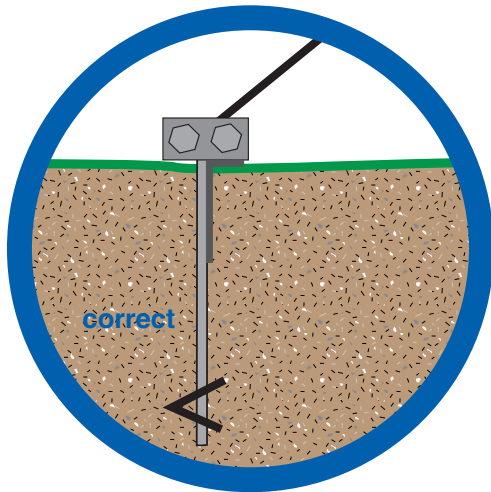

**WARNING:** Ground anchors can fail under high wind loads if they are not installed to their full depth, resulting in severe damage to the home.

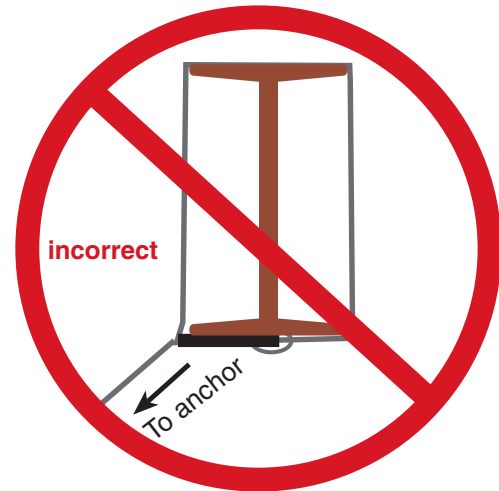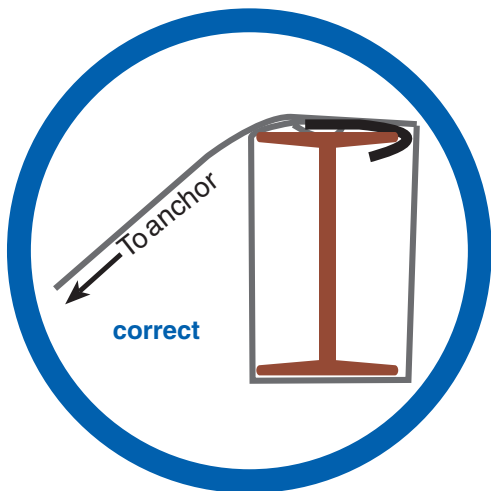

**NOTICE:** Frame tie connections must come off the "top" of the frame in order to prevent frame damage.