
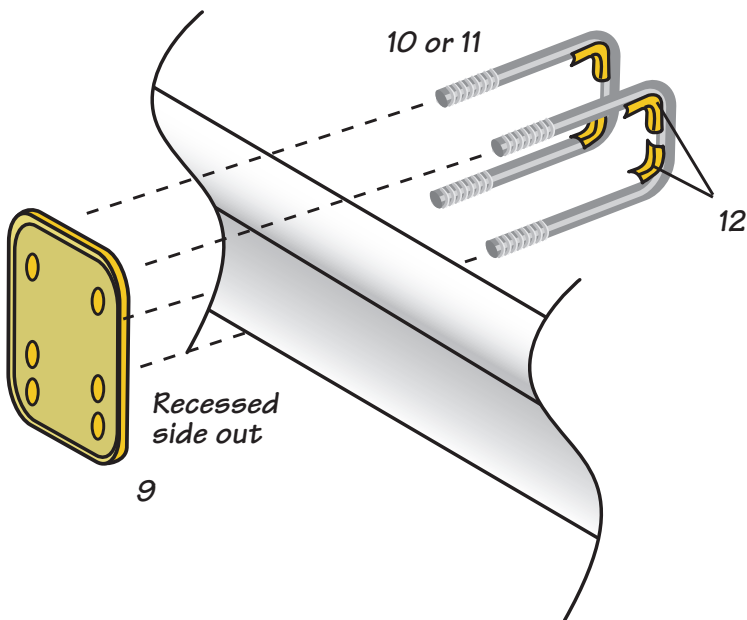
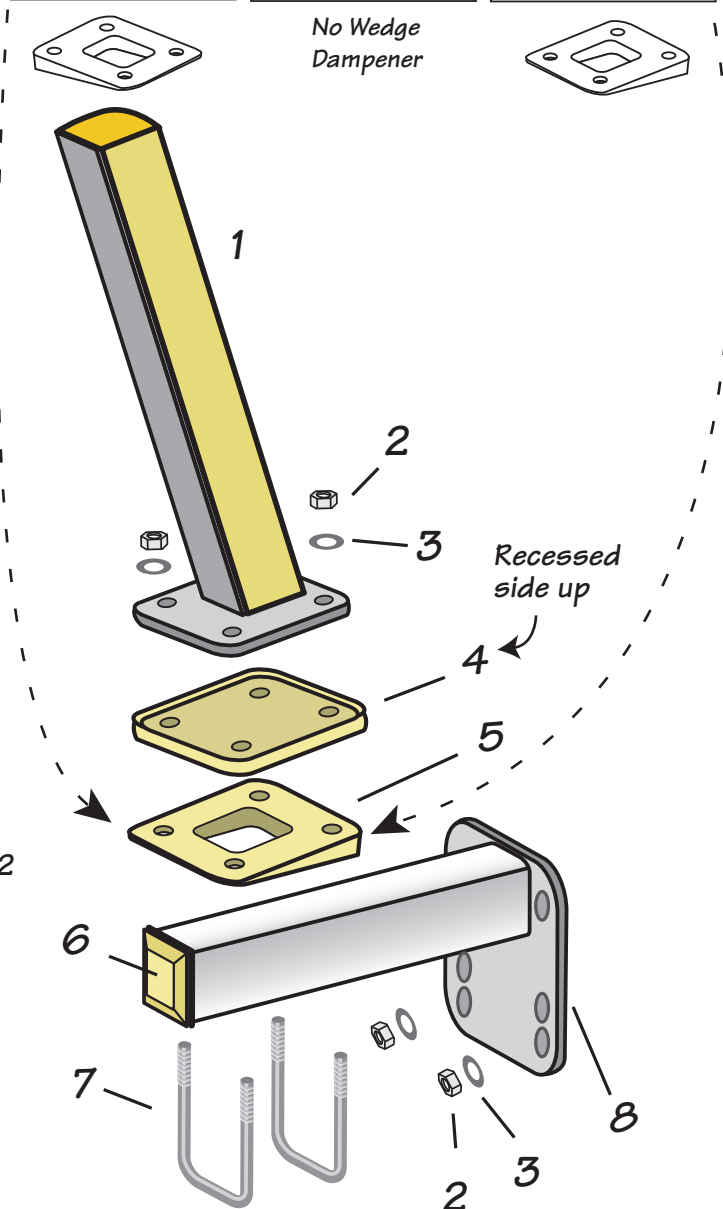


# Shock Absorbing Boat Side Guide On's

## Assembly/Installation Instructions Part #86104

This kit contains the following components:

#	Part #	Description	Qty
1	44023A	Side Guide 22"	2
2	10627	Lock Nut 3/8"	16
3	10502	Flat Washer 3/8"	16
4	48362	PVC Guide	2
5	48364	Damper Wedge	2
6	48363	End Cap Small 2x2	2
7	83073Z	U-Bolt 3/8 x 2.19 x 3.5	4
8	44049	Horizontal Side Guide	2
9	48365	Side Mount Damper	2
10	83074Z	U-Bolt for 3" Frames (3/8 x 3-3/16 x 3-3/4)	4
11	83075Z	U-Bolt for 4" Frames (3/8 x 4-3/16 x 3-3/4)	4
12	48360	U-Bolt Protectors	8

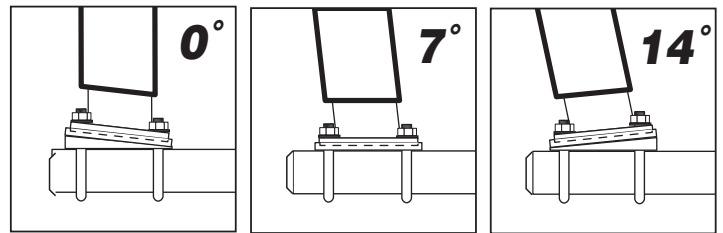

Instructions #15372 (D270 - Rev. 3/15/19)