


Guidelines for MHT-6 Frame Hook Strap Assemblies

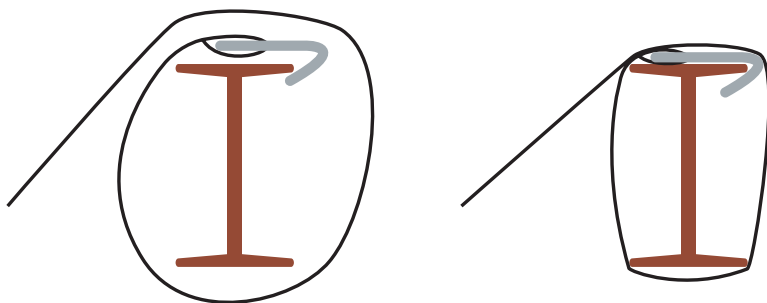

1. In order to assure adequate compliance refer to all local, State, and Federal Regulations, as well as manufacturer's recommended tie down method.
2. Insert Frame Hook with strapping in between the floor and the "I" beam. Position so that the hook is attached to the inner, upper edge of the "I" beam.
3. Wrap the strap around the "I" beam directly over the hook and over the top of the "I" beam.
4. Thread the end of the strap through the slotted tensioning bolt attached to the tensioning head for the anchor. Tighten slotted tensioning bolt 4 - 5 full turns until all slack is removed and strap is tight.

TIE DOWN ENGINEERING
Atlanta, GA 30336
www.tiedown.com (404) 344-0000

