



TranzSporter

Telescoping Brace Instructions For TP Model Hoist

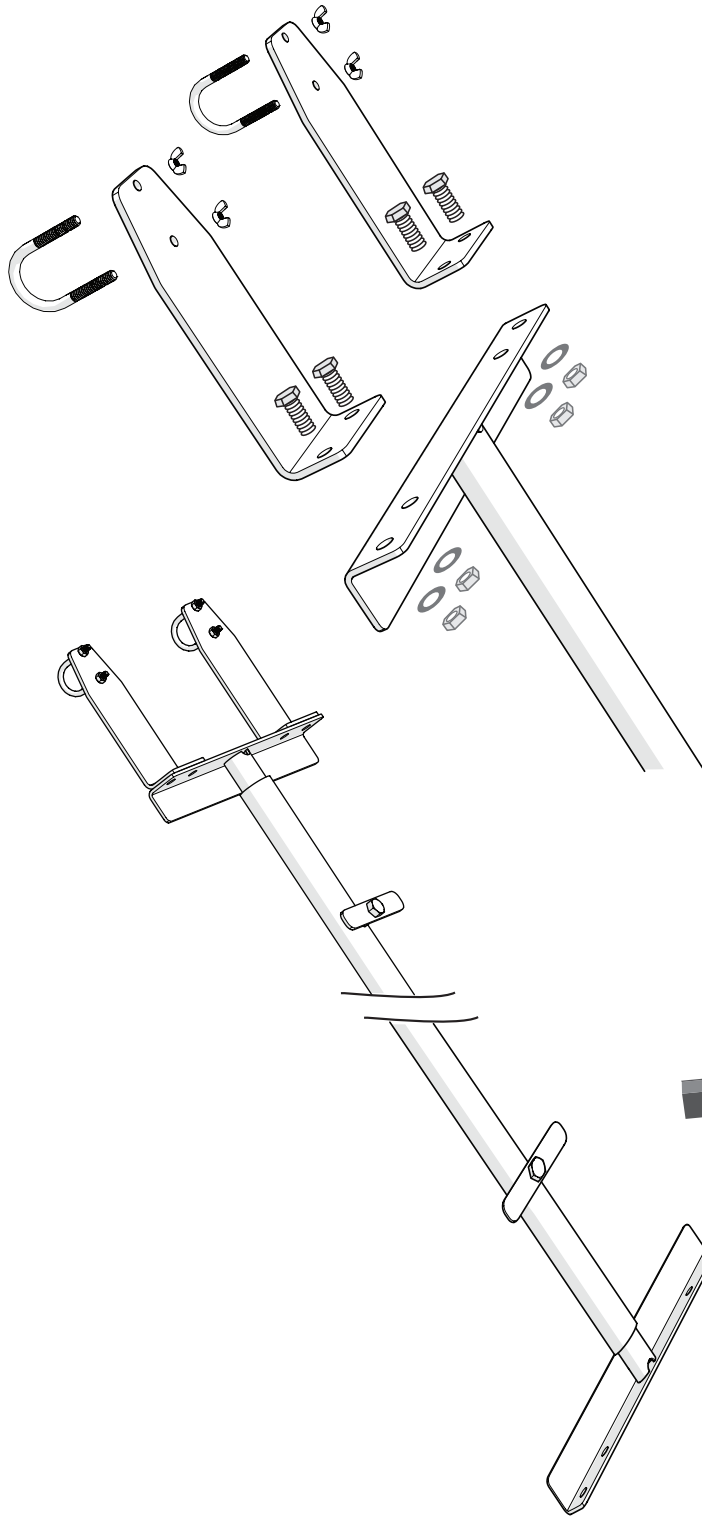

	Part #	Description	Quantity
	60005	Telescoping Brace	1
1	48545	CENTER TUBE	1
2	48544	END TUBE	2
3	48605	LADDER RUNG BRACKET	2
4	48546	BOLT TEE	2
5	10627	NUT NYLOCK 3/8-16 ZINC GR 2	4
6	10538	HHCS 3/8-16X1 GR 5 ZINC	4
7	10502	WASHER FLAT 3/8-16, ZINC	4
8	10974	U-BOLT 1/4-20 id 1.25 IN	2
9	10483	1/4-20 wing nuts	4

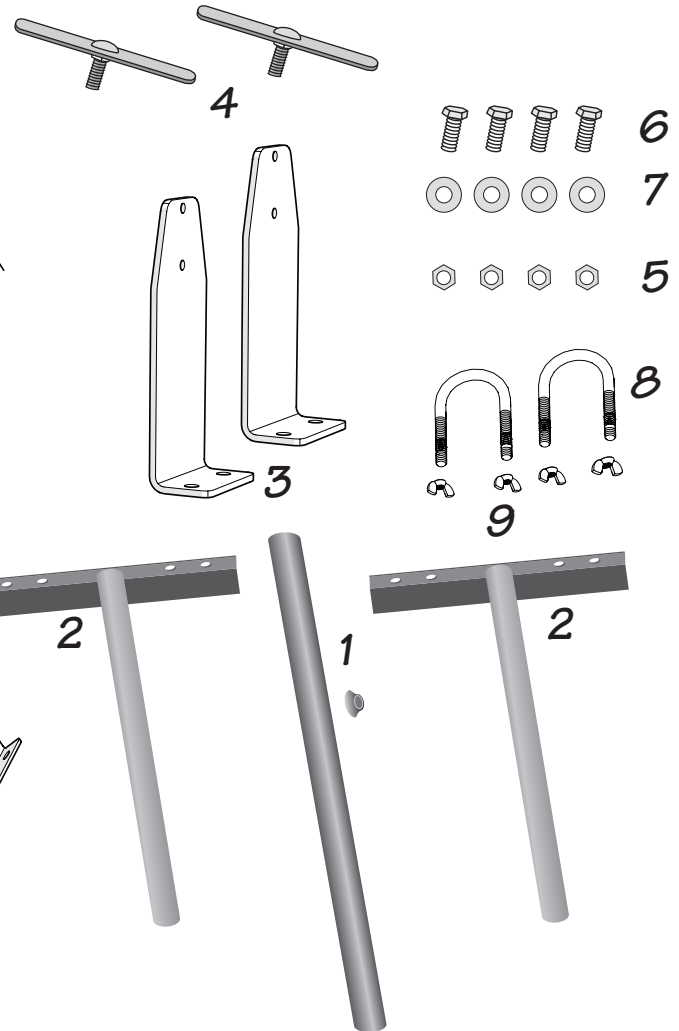

Instruction Sheet #15385

E134- Rev. 1/3/19

TIE DOWN
MANUFACTURING INGENUITY

404-344-0000 • tiedown.com
605 Stonehill Drive SW, Atlanta, GA 30336

TranzSporter

Telescoping Brace Instructions

	Part #	Description	Quantity
	60005	Telescoping Brace	1
1	10059	Detent Ring Pin 5/16"	2
2	10502	Washer Flat 3/8"-16	4
3	10538	Screw Cap Hex 3/8"-16	4
4	10627	Nut Nyloc 3/8"	4
5	48543L	Telescoping Brace Left	1
6	48543R	Telescoping Brace Right	1
7	48544	Telescoping Brace EN	2
8	48545	Center Tube Telescope	1
9	48546	Bolt Tee	2

