



Guidelines for MBU7 Strap Assemblies

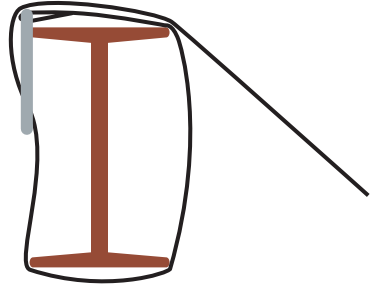

1. In order to assure adequate compliance refer to all local, State, and Federal Regulations, as well as manufacturer's recommended tie down method.
2. Insert Buckle with strapping in between the floor and the "I" beam. Position buckle at the inner, upper edge of the "I" beam frame.
3. Wrap the strap around the "I" beam and thread loose end of strap through the slot in buckle. Push the end of the strap in between "I" beam and floor.
4. Pull the strap, making certain the buckle stays in position. Thread loose end of strap through tensioning bolt attached to anchor. Tighten slotted tensioning bolt a minimum of 4 –5 full turns until all slack in strap is removed.

TIE DOWN ENGINEERING
Atlanta, GA 30336
www.tiedown.com (404) 344-0000

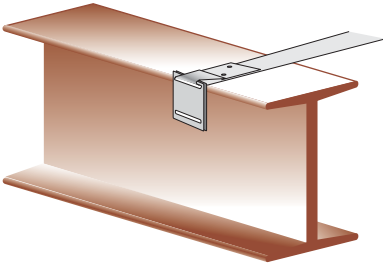