



SUPER LUBE™

***Hubs and Spindles
Owner's Manual***

Super Lube Wheel Hub/Spindle Operating Instructions


Simple is best. Especially when it comes to wheel bearing maintenance. That's why Tie Down introduced Super Lube, the hub bearing lubrication system that provides continuous protection with a fast and easy maintenance program.

Attach a conventional grease gun to the grease fitting. As new grease is pumped into the system, the old grease is forced out of the bearings and into the dust cap reservoir. Remove all excess grease from the dust cap reservoir, replace the rubber expansion access cap and repacking is completed, with out the expense of a service center.

Your trailer is equipped with Tie Down Engineerings wheel hubs/spindles. The hubs are pre-greased with Lucas "Red n' Tacky" grease and assembled at the factory. The hubs should not require any initial adjustments. The hub uses tapered roller bearing cones and cups. This configuration requires a minimal amount of end play that is provided at the time of assembly. Use Lucas "Red n' Tacky" grease or a quality lithium based marine grease.


SUPER LUBE

"Spindle"

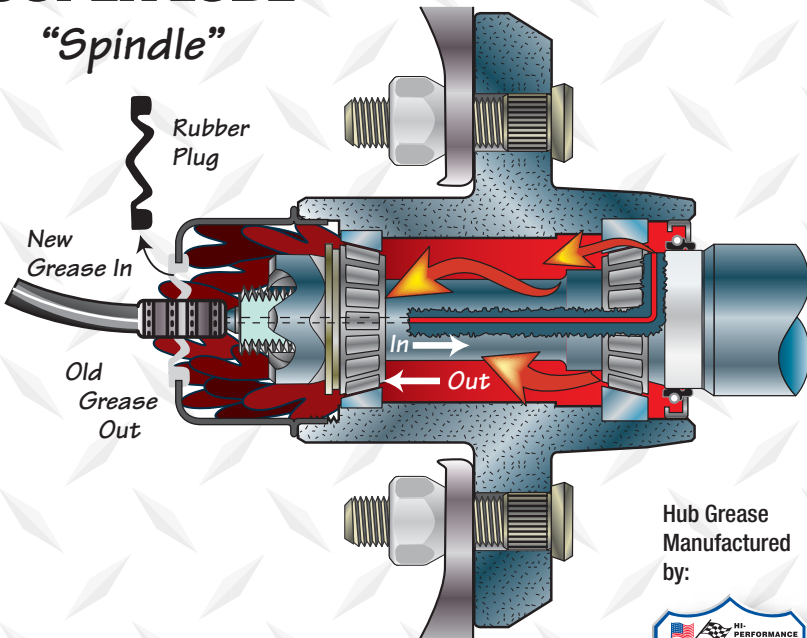

Super Lube "Spindle" Lubrication

1. Remove the rubber plug from the grease (hub) cap.
2. Use a standard grease gun onto the grease fitting located at the end of the spindle, making sure the grease gun nozzle is engaged on the fitting tightly.
3. Pump grease into the fitting, while slowly turning the wheel. Grease will flow out of the hub around the spindle.
4. When the grease appears to be the new clean grease, remove the grease gun and wipe off any excess grease.
5. Replace the rubber plug in the cap.

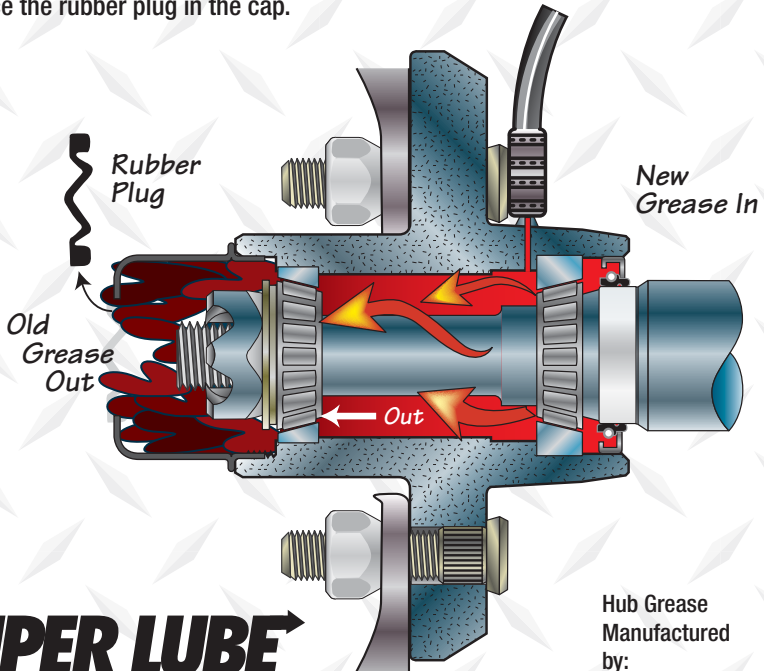

SUPER LUBE
"Hub"

Hub Grease
Manufactured
by:



Super Lube "Hub" Lubrication

1. Remove the rubber plug from the grease (hub) cap.
2. Use a standard grease gun pressed onto the grease fitting located behind wheel/hub, making sure the grease gun nozzle is engaged on the fitting tightly.
3. Pump grease into the fitting, while slowly turning the wheel. Grease will flow out of the hub around the spindle.
4. When the grease appears to be the new clean grease, remove the grease gun and wipe off any excess grease.
5. Replace the rubber plug in the cap.

Removal/Remounting for the Super Lube Hub

Removing the hub for inspection or maintenance should be done in a safe location away from moving vehicles.

1. Elevate the trailer using the manufacturers instructions. Always use jack stands or other solid supports. Do not depend on a jack to support the trailer. Block wheels to keep trailer from rolling.
2. Remove the tire/wheel assembly.
3. Remove the grease cap from the hub by prying around the edge of the cap.
4. Remove the cotter pin if equipped or bend the locking tang washer to the "free" position.
5. Remove the spindle nut in a counterclockwise direction and remove the spindle washer.
6. Remove the hub from the spindle. Be careful not to allow bearings to fall out of the hub.
7. Clean bearing and cup surfaces
8. To re-install, coat bearings with Lucas Oil grease before re-installing.
9. Install bearings and place hub on spindle in reverse order as listed above. Rotate the hub while applying approximately 50 ft. lbs. of torque to the spindle nut. This translates into a full hand pressure load with a 12" long wrench. This "seats" the bearings.
10. Loosen the spindle nut to remove the torque applied. **DO NOT ROTATE THE HUB.**
11. Tighten the spindle nut until snug, backing off only enough to line up the cotter pin with the hole in the spindle.
12. Bend the cotter pin into place
13. Replace grease/hub cap. Remove the Super Lube rubber plug.
14. **LOAD HUB WITH LUCAS OIL GREASE USING THE INSTRUCTIONS FOR ADDING OR CHANGING GREASE.**

VERY IMPORTANT: RE-CHECK LUG NUTS AFTER 25 MILES OF USE.



Super Lube Hubs Are
Pre-greased With
Lucas "Red n' Tacky" Grease



TIE DOWN ENGINEERING

Atlanta, Georgia 30336

800-241-1806 • 404-344-0000

ISO 9001:2008 Certification

Trade, brand, names and drawings are the intellectual property of
TIE DOWN ENGINEERING. ©2015 TIE DOWN, Inc.

Manual #08077 (Rev. 11-16-16)

#T-183124